



快速安装指南 i86系列

1 包装清单

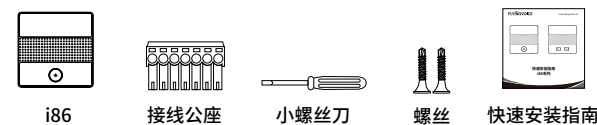


2 产品结构

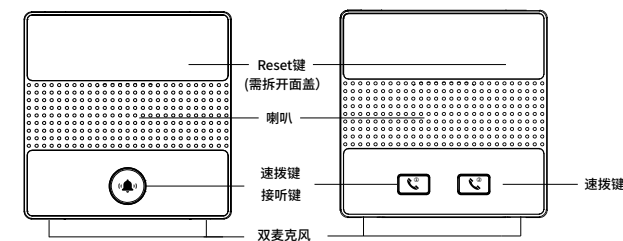

设备尺寸	86 x 86 x 38.8mm
i86-01	1*速拨键
i86-02	2*速拨键
i86-03	1*速拨键, 1*开门键


3 接口说明

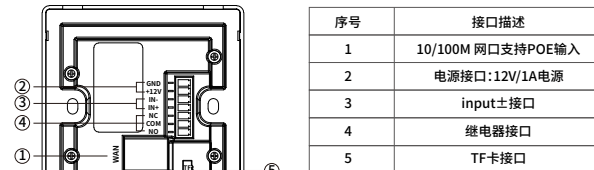

4 设备安装

一、接线



- 如果您的环境支持PoE供电, 只需插入网线即可。
- 如果您的环境为12V DC供电, 只需连接电源接口+12V和GND。
- 如果您需要使用门禁功能, 根据以下示意图:

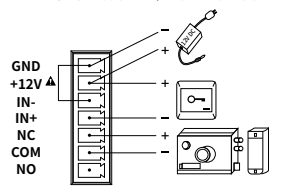

▲注: 如您使用不带电源的开关, 需要将 GND 和 IN- 短接, 并将开关连接 12V 和 IN+ 脚。


二、面板安装

安装i86需要搭配标准86底盒, 如下图所示, 先打开i86V面盖, 将设备放入您的86底盒, 并把螺丝拧入, 即可完成面板安装。

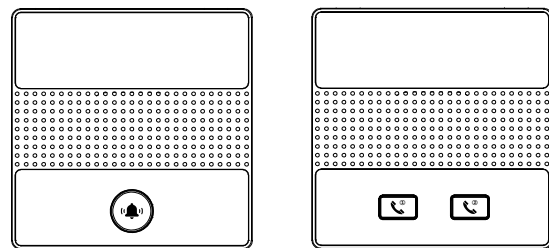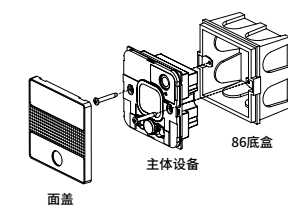


Quick Installation Guide i86 series

1 Packing list

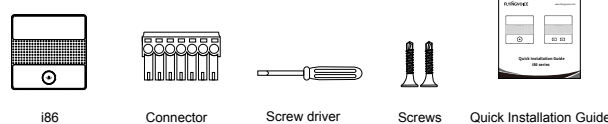


2 Physical specification

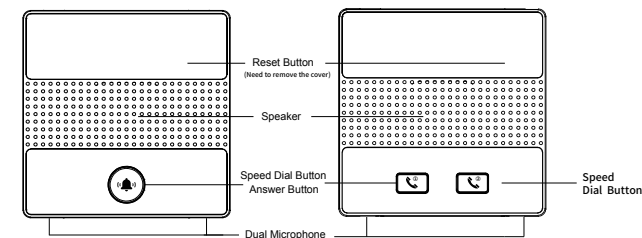

Device size	86 x 86 x 38.8mm
i86-01	Speed Dial button x 1
i86-02	Speed Dial button x 2
i86-03	Speed Dial button x 1, Door Open button x 1


3 Interface description

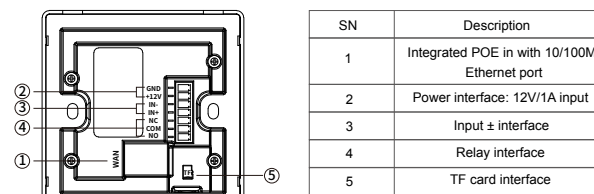

4 Installation diagram

4.1 Connection

- If the device powers on using POE, then plug a RJ45 Ethernet cable into it only.
- If the device powers on using 12V DC, then connect the +12V and GND.
- If enable the door access control of the device, please follow the steps as shown on the right side:

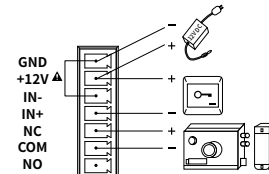

▲ Note: If the switch is without electricity, please set short circuit with IN- and GND, connect the switch to 12V and IN+.

5 基本配置

一、访问配置界面

- 确保您的设备已插入网线。
- 设备默认会自动获取IP地址, 您可以长按任意按键5s播报IP地址, 此时您可以通过局域网内的PC或手机浏览器访问IP地址, 登录管理界面。
- 若您的环境是静态IP, 请先打开面盖, 使用顶针短按Reset按键, 即可打开设备Wi-Fi, 您可以通过PC或手机连接设备的Wi-Fi, 通过浏览器访问192.168.15.1, 登录管理界面, 配置静态IP。
- 配置界面默认登录用户名/密码: admin/admin, 若您作为门禁设备使用, 登录成功后, 请及时修改设备用户名/密码。

二、话机注册


登录配置界面后, 点击“VoIP-账号1”, 账号使能选择“开启”, 并输入注册参数。

配置信息

基本设置	
账号使能	<input checked="" type="checkbox"/> 开启
用户信息	
显示名称	6620
注册名称	6620
认证名称	6620
密码	*****
代理和注册	
注册服务器	192.168.80.80
注册服务器端口	5060
代理服务器	
代理服务器端口	5060
备份代理服务器	
备份代理服务器端口	5060
启动DHCP选项120	<input checked="" type="checkbox"/>
服务器设置	传输方式: UDP

4.2 Wall mount

Open the cover of the device, put it into the type-86 bottom box and drive the screw into the drilled hole. The installation is as follows:

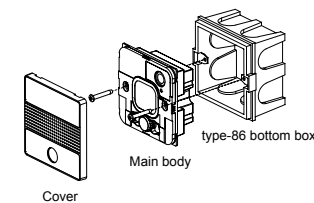

5 Configuration

5.1 Configuring your device

- Check if the device enables Internet with the Ethernet cable.
- By default, the device will obtain an IP address by itself. Long press any button for 5 seconds, the device will report the IP address, you can log in the web interface on your phone or computer in the same LAN by this IP address.
- If it is in the mode of static IP address, open the cover of the device, tap the reset button to enable Wi-Fi. Connect Wi-Fi of the device, and access into web interface by typing 192.168.15.1 on the website to configure your static IP address.
- The default user name and password are both admin. If the device is used in access door controller, we recommend you to modify your name and password timely.

5.2 Phone registration

Log in web interface and head to configure information, click the “SIP-Account 1”, choose Enable on Line Enable and input SIP account parameters.

三、配置对讲

点击“电话-功能键”, 可对按键配置“速拨”, 在输入框“值1”中输入对端的分机号即可。

四、配置开门

点击“电话-功能键”, 可对按键配置选择“Action Url”, 在输入框“值1”中输入对端门禁的开门地址。

按键	类型	账号	值1	标签
左键	速拨	账号1	192.168.50.116	求助
中键/右键	Action Url		http://admin:admin@r	101室大门
虚拟键	组播		224.0.0.6:1006	园区

飞音时代产品保修条例

尊敬的客户:

感谢您选购深圳飞音时代网络通讯技术有限公司的产品。自您购买产品之日起, 凡按照使用说明书安装使用, 一年内本公司免费维修, 一年后维修只收取维修工本费。非本公司产品质量原因引起的维修, 如使用不当, 保管不妥, 擅自拆机等原因造成的损坏, 将收取维修工本费。
注: 申请产品维修时, 请把此保修卡和所购产品一起妥善送(寄)售后服务部维修。

保修卡

产品型号		标签	
客户名称		购买日期	
客户地址			
联系人		电话	
经销单位			
联系人		电话	
销售日期			

Configure information

Basic Setup	
Line Enable	<input checked="" type="checkbox"/> Enable
Subscriber Information	
Display Name	6620
Phone Number	6620
Account	6620
Password	*****
Proxy and Registration	
Proxy Server	192.168.80.80
Proxy Port	5060
Outbound Server	
Outbound Port	5060
Backup Outbound Server	
Backup Outbound Port	5060
Allow DHCP Option 120 to Override SIP Server	<input checked="" type="checkbox"/>
Transport	UDP

5.3 Intercom configuration

Click “Phone-Function Key” to set speed dial parameters, and input an extension number in column “Value 1”.

5.4 Security function configuration

Click “Phone-Function Key” to set the Action Url parameters, and input the corresponding address of the door number in column “Value 1”.

Key	Type	Line	Value 1	Label
Left	SpeedDial	Line1	911	SOS
Middle/Right	Action Url		http://admin:admin@r	Door 1
Virtual	Paging		224.0.0.6:1006	