

## 快速安装指南 SR3000

 
 
### 1 包装清单

请检查您购买的产品是否包含以下组成固件,若缺少请与您的经销商联系。




SR3000 电源适配器 电话线 网线 快速安装指南

### 2 产品结构

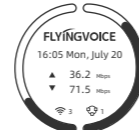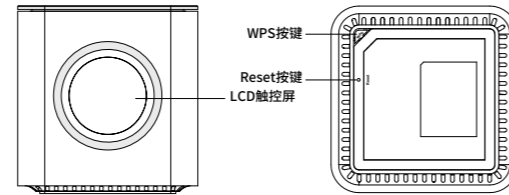

设备尺寸	100 x 100 x 104mm
LCD触控屏	分辨率为240 x 240px
WPS按键	长按Mesh组网
Reset按键	恢复出厂设置

### 3 接口说明

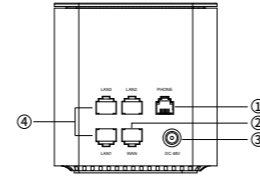 

序号	接口描述
1	Phone接口
2	WAN接口
3	DC电源接口
4	LAN接口

### 4 设备开机

第一步 将电源适配器插入设备的DC电源插孔,连接无误后通电并启动该设备。

第二步 将以太网电缆连接到设备背面的WAN接口,并将以太网电缆的另一端连接到可用的网络适配器,如交换机或路由器。

第三步 通过LAN口连接PC,登录该设备的配置页面(默认IP地址为:192.168.1.1)。

**需要授权**

请输入用户名和密码。

用户名	<input type="text"/>
密码	<input type="password"/>

第四步 使用电话线将设备的Phone口连接到模拟电话机,账号注册成功即可拨打电话。

### 5 基本配置

#### 一、网络连接模式

请确定您的网络接入模式属于哪一种,并记录相关参数。通常网络接入方式有三种:DHCP,静态IP,PPPoE。

**DHCP:** 设备默认通过DHCP服务器获取网络配置。例如:IP地址、子网掩码、网关和DNS服务器。

**静态IP:** 若设备无法通过DHCP服务器获取网络配置,则需要手动IP地址、子网掩码、网关、首选DNS服务器和备选DNS服务器。

**PPPoE:** 若设备使用ADSL调制解调器,则通过PPPoE方式连接到网络。有关用户名及密码的具体信息,请咨询网络技术服务提供商。

#### 二、访问配置页面

第一步 将设备的LAN端口与电脑通过网线连接,电脑设为动态获取IP地址模式,即可从设备获取一个192.168.1.X的一个地址。

第二步 打开IE (Internet Explorer 浏览器)或其他浏览器,在地址栏输入http://192.168.1.1就可以登陆SR3000的配置界面(默认 管理员:admin 密码:admin)。

#### 飞音时代产品保修条例

 
尊敬的客户:

感谢您选购深圳飞音时代网络通讯技术有限公司的产品。自您购买产品之日起,凡按照使用说明书安装使用,一年内本公司免费维修,一年后维修只收取维修工本费。非本公司产品质量原因引起的维修,如使用不当,保管不妥,擅自拆卸等原因造成的损坏,将收取维修工本费。

#### 保修卡 Warranty Card

产品型号/Model		标签/Tag	
客户名称/Customer Name		购买日期/Date of Purchase	
客户地址/Customer Address			
联系人/Contact Person		电话/Tel.	
经销单位/Distribution Units			
联系人/Contact Person		电话/Tel.	
销售日期/Date of Sale			

注:申请产品维修时,请把这保修卡和所购产品一起妥善送(寄)回售后服务部维修。

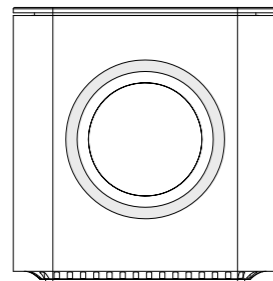

## Quick Installation Guide SR3000

 
 
### 1 Packing list

The following items are included in your package. Please contact your service provider, if you find anything missing.




SR3000 Power Adapter Phone Cable Ethernet Cable Quick Installation Guide

### 2 Physical specification

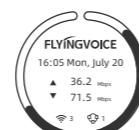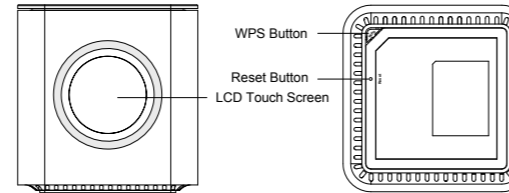

Device Size	100 x 100 x 104mm
LCD Touch Screen	240 x 240px
WPS Button	Long press for Mesh networking
Reset Button	Reset data

### 3 Interface Description

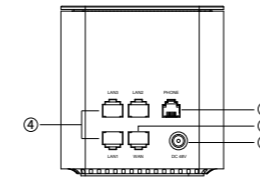 

No.	Port Description
1	Phone Port
2	WAN Port
3	DC Power Port
4	LAN Ports

### 4 Device Start

1. Connect one end of the power cord to the power port of the device. Connect the other end to the wall outlet.

2. Connect the WAN port to the Internet your network's modem/switch/router/ADSL.

3. The LAN port connect to your local networked devices. Log in to the configuration web of the device (the default IP address is: 192.168.1.1).

**Authorization Require**

Please enter your username and password.

Username	<input type="text"/>
Password	<input type="password"/>

4. Use a Phone cable to connect the Phone port to an analog phone, phone call can be made after the account be registered successfully.

### 5 Basic Configuration

#### Network Connection Mode

Confirm your network access mode and record relevant information. Generally, there are three ways of network access: DHCP, Static IP, and PPPoE.

**DHCP:** The device obtains the network configuration through the DHCP server by default.

**Static IP:** If the device cannot obtain network configuration through the DHCP server, manual IP address, subnet mask, gateway, and preferred DNS server are required and alternate DNS servers.

**PPPoE:** If the device uses an ADSL modem, it is connected to the network through PPPoE. For specific information about usernames and passwords, please consult your network technology service provider.

#### Visit the configuration web

1. Connect the LAN port of the device to the PC through a network cable, and set the PC to dynamically obtain an IP address mode to obtain an address of 192.168.1.X from the device.

2. Open IE (Internet Explorer browser) or other browsers, and enter http://192.168.1.1 in the address bar to log in to the configuration interface of SR3000 (default administrator: admin password: admin).

#### Flyingvoice Product Warranty Regulations

#### Dear Customer:

Thank you for purchasing the products of Shenzhen Flyingvoice Network Technology Co.,Ltd.

Since the date of purchase, where the installation and use in accordance with the quick installation guide, our company will provide free maintenance within one year, after one year maintenance only charge the maintenance fee. Maintenance for non-product quality issues, such as improper use, improper storage, unauthorized disassembly and other causes for damage, will be charged for maintenance fee.

Note: When applying for product maintenance, please send the **warranty card in this quick installation guide(in another page)** and the purchased product back to the customer service department properly for maintenance.