

 
快速安装指南  
SR3000-5G

1 包装清单


请检查您购买的产品是否包含以下组成固件,若缺少请与您的经销商联系。



2 产品结构

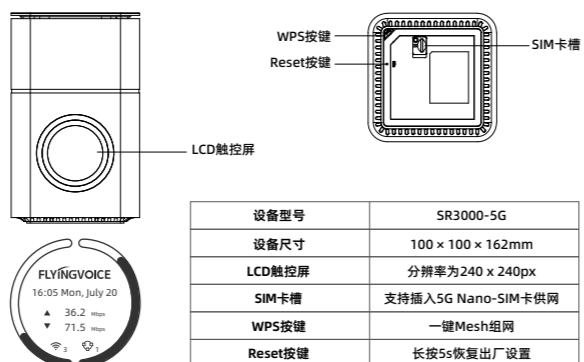

3 接口说明

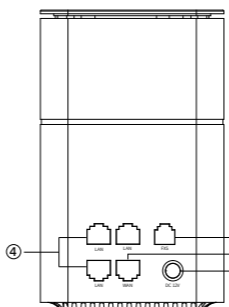 


序号	SR3000-5G接口描述
1	RJ11 FXS Phone 接口
2	GE WAN 接口
3	12V DC 电源接口
4	3×GE LAN 接口

4 设备上电&联网

一、上电

 1. 本产品默认配备了分离式电源适配器,支持多国规格电源插头,使用前请组装插头:将替换件的凹槽对准电源适配器本体上突出的金属片,顺时针旋转锁定,在使用电源适配器前,请务必确保已正确安装;
2. 将电源适配器的DC端子插入设备,再将另一端插入电源插座,等待设备开机完成。

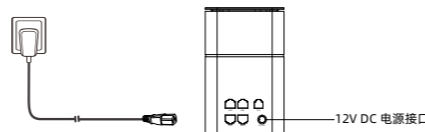


二、接入互联网

本产品默认支持双网络链路(5G蜂窝网络和WAN口有线网络):

- (1) 使用包装内附带RJ45网线接入互联网,默认为DHCP模式,自动获取IP地址;
- (2) 使用5G Nano-SIM接入蜂窝网络,打开卡槽硅胶塞,将SIM卡按正确方向插入设备底部的卡槽后,盖上卡槽硅胶塞。

联网成功后LCD屏会显示正确的日期时间,设备默认优先使用有线网络,以SIM卡的蜂窝网络作为备份网络链路。

 注:由于Nano-SIM卡尺寸过小,您可以使用包装内附带的SIM卡插拔工具。

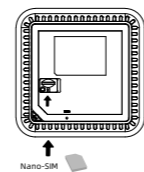


三、连接Wi-Fi

联网成功后,设备默认开启2.4G & 5G Wi-Fi,默认SSID为SR3000-5G\_MAC地址后六位,默认密码为SN码后八位,可查看机身铭牌查看。

5 Web配置

 您可通过连接PC,进行Web功能配置。使用另一根RJ45网线,将设备的LAN端口与PC连接,或连接设备的Wi-Fi,PC通过浏览器访问设备管理地址(默认:192.168.1.1)进入登录页面。初始管理员账号和密码为:admin/SN后6位,可通过机身铭牌查看密码。登录成功后,自动进入后台配置页面,即可进行相应配置。

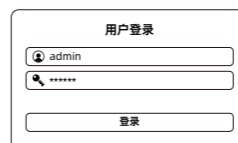

飞音时代产品保修条例


尊敬的客户:

感谢您选购深圳飞音时代网络通讯技术有限公司的产品,自您购买产品之日起,凡按照使用说明书安装使用,一年内本公司免费维修,一年后维修只收取维修工本费,非本公司产品质量原因引起的维修,如使用不当,保管不妥,擅自拆机等原因造成的损坏,将收取维修工本费。

保修卡 Warranty Card

产品型号/Model		标签/Tag	
客户名称/Customer Name		购买日期/Date of Purchase	
客户地址/Customer Address			
联系人/Contact Person		电话/Tel.	
经销单位/Distribution Units			
联系人/Contact Person		电话/Tel.	
销售日期/Date of Sale			

 
注:申请产品维修时,请把此保修卡和所购产品一起妥善送(寄)回售后服务部维修。

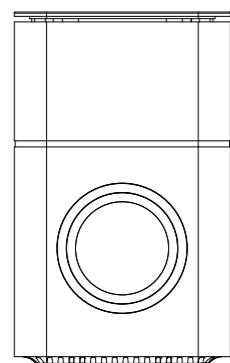


Quick Installation Guide  
SR3000-5G

1 Packing list

 
The following items are included in your package. Please contact your service provider, if you find anything missing.

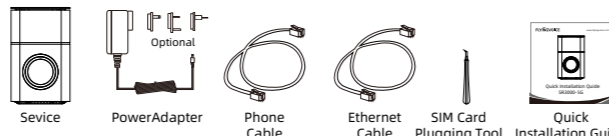

2 Physical specification

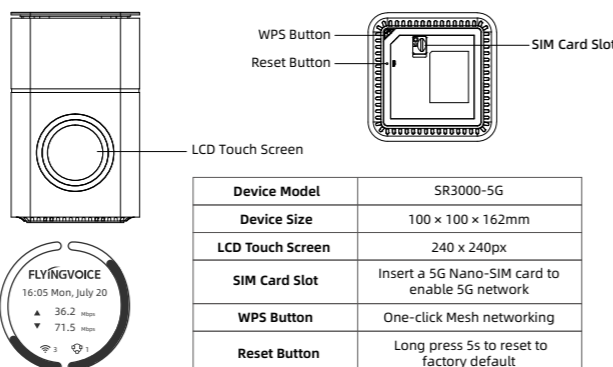 


3 Interface Description

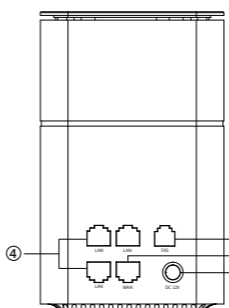 

No.	SR3000-5G Port Description
1	RJ11 FXS Phone Port
2	GE WAN Port
3	12V DC Power Port
4	3×GE LAN Ports

4 Power on & Connection

 
**Power On:** This product is equipped with a separate power adapter by default, support multinational specification power plug, please assemble the plug before use: align the grooves of the replacement with the metal tabs protruding from the body of the power adapter and turn clockwise to lock it in place, please make sure that adapter has been installed correctly before using.

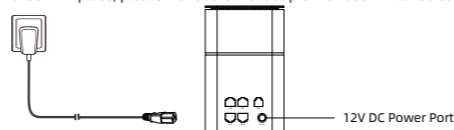

**Access to Internet:** By default, this product supports dual network links (5G cellular network and WAN wired network):

- (1) Use RJ45 cable included in the package to access the internet. The default mode is DHCP, and the IP address is automatically obtained.
- (2) Use 5G Nano-SIM card to access the cellular network. Open the card slot silicone plug, insert the SIM card into the card slot at the bottom of the device, and cover the card slot silicone plug. After successful networking, the LCD screen will display the correct date and time. By default, the device preferentially uses the wired network, and uses the cellular network of the SIM card as the backup network link.

 **Note:** Due to the small size of the Nano-SIM card, you can use the SIM card plugging tool included in the package for convenience.

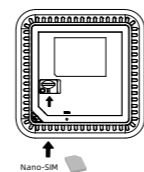


**Connect to Wi-Fi:** After successful networking, the device will enable 2.4G & 5G Wi-Fi by default. The default SSID is SR3000-5G\_last 6 digits of MAC address, the default password is last 8 digits of SN number. You can get it through the label of the device case.

5 Web Configuration

You can configure functions through the website by connecting the PC. Use another RJ45 cable to connect the LAN port of the device to the PC, or connect the Wi-Fi of the device. The PC accesses the device management address (default: 192.168.1.1) through a browser to enter the login page.

The initial administrator account/password:

 **admin/the last 6 digits of the serial number**, you can get the password through the label of the device case. After successful login, you can automatically enter the background configuration page to perform the corresponding configuration.

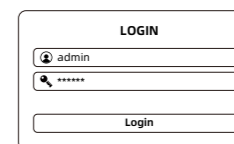

Flyingvoice Product Warranty Regulations

Dear Customer:

Thank you for purchasing the products of Shenzhen Flyingvoice Network Technology Co.,Ltd. Since the date of purchase, where the installation and use in accordance with the quick installation guide, our company will provide free maintenance within one year, after one year maintenance only charge the maintenance fee. Maintenance for non-product quality issues, such as improper use, improper storage, unauthorized disassembly and other issues for damage, will be charged for maintenance fee.

**Note: When applying for product maintenance, please send the warranty card in this guide and the purchased product back to the customer service department properly for maintenance.**